


Signalling, remote tripping auxiliaries and motorised controls DX³

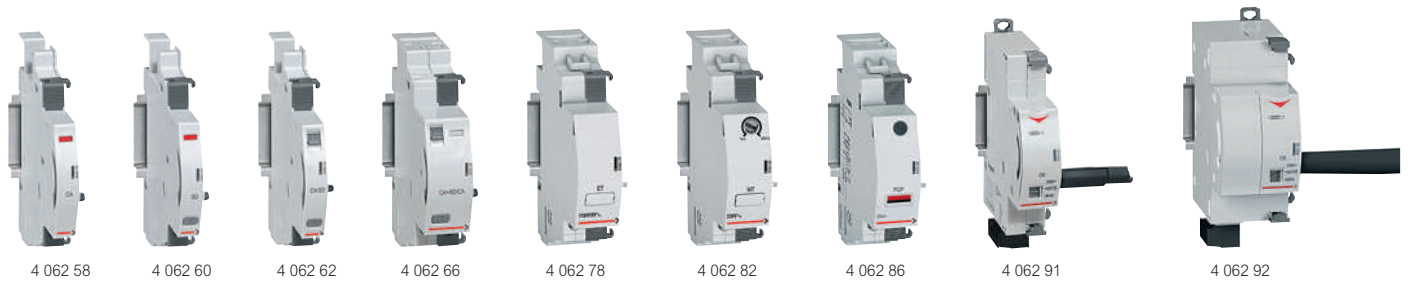

Pack	Cat.Nos	Signalling auxiliaries prong busbar adapted	Pack	Cat.Nos	Remote tripping auxiliaries							
1	4 062 58	<p>To fit on the left-hand side of DX³ and TX³ devices Maximum number of auxiliaries per device: - 3 signalling auxiliaries or - 2 signalling auxiliaries + 1 remote tripping auxiliary Allow insertion of the supply busbar, top side No tool required for joining together the auxiliary and the main device.</p> <p>Auxiliary contact 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs, isolating switches or remote trip isolating switches Indicates the position of the contacts of its associated device.</p>	0.5	1	4 062 76	<p>To fit on the left-hand side of DX³ and TX³ devices Maximum 1 remote tripping auxiliary per device Allow insertion of the supply busbar No tool required for joining together the auxiliary and the main device. For MCBs, RCBOs, RCCBs and remote trip isolating switches</p> <p>Current shunt trips For remote tripping of its associated device via a N/O push button</p>						
1	4 062 60	<p>Fault signalling contact 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs, Indicates the fault tripping of its associated device</p>	0.5	1	4 062 78	<p>12 to 48 V~/=</p> <p>Undervoltage releases For remote tripping of its associated device in case of mains voltage drop down or with the help of a N/C push button</p>						
1	4 062 62	<p>Auxiliary or fault signalling contact 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs Allows the choice between the two functions</p>	0.5	1	4 062 80	<p>24 to 48 V~/=</p> <p>Power overvoltage protection (POP) Protects the circuit by tripping its associated device in case of overvoltage between phase and neutral. Tripping threshold : 275 V (eg. in case of neutral interruption)</p>						
1	4 062 66	<p>Auxiliary + fault signalling contact or auxiliary contact + auxiliary contact 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs</p>	1	1	4 062 82	<p>230 V~</p> <p>Autonomous shunt trip for N/C push-button 230 V~ For remote tripping with positive security on a control circuit via a N/C push-button or emergency stop. Does not trigger its associated device in case of mains power failure (the trigger occurs only after a deliberate action of a N/C push-button). Supplied with battery Minimum working reserve: 60 hours (for remote tripping even if there is no supply voltage) Spare battery for autonomous shunt trip Cat.No 4 062 87</p>						
1	4 062 50	<p>Signalling auxiliaries fork busbar adapted To fit on the left-hand side of DX³ and TX³ devices Maximum number of auxiliaries per device: - 3 signalling auxiliaries or - 2 signalling auxiliaries + 1 remote tripping auxiliary Allow insertion of supply busbar, bottom side No tool required for joining together the auxiliary and the main device.</p> <p>Auxiliary contact 6 A - 250 V~(changeover switch) For MCBs, RCBOs, RCCBs, isolating switch or remote trip isolating switch Indicates the position of the contacts of its associated device</p>	0.5	1	4 062 85	<p>Motorised controls For remote control (opening and closing) of their associated device. To fit on the left-hand side of DX³ and TX³ devices For MCBs, RCBOs, RCCBs and remote trip isolating switches (from 1P to 4P) Can take one control auxiliary and one signalling auxiliary. No tool required for joining together the motorised control and the main device</p>						
1	4 062 52	<p>Fault signalling contact 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs, Indicates the fault tripping of its associated device</p>	0.5	1	4 062 90	<p>ON/OFF function - for 1 module / pole devices (In up to 63 A)</p> <table border="1"> <thead> <tr> <th>Control voltage</th> <th>Number of modules</th> </tr> </thead> <tbody> <tr> <td>24-48 V~/=</td> <td>1</td> </tr> <tr> <td>230 V~</td> <td>1</td> </tr> </tbody> </table>	Control voltage	Number of modules	24-48 V~/=	1	230 V~	1
Control voltage	Number of modules											
24-48 V~/=	1											
230 V~	1											
1	4 062 56	<p>Auxiliary or fault signalling contact 6 A - 250 V~ (changeover switch) For MCBs, RCBOs, RCCBs Allows the choice between the two functions</p>	0.5	1	4 062 91	<p>ON/OFF function - for 1.5 module / pole devices (In up to 125 A) from 2P to 4P</p> <table border="1"> <thead> <tr> <th>Control voltage</th> <th>Number of modules</th> </tr> </thead> <tbody> <tr> <td>230 V~</td> <td>2</td> </tr> </tbody> </table>	Control voltage	Number of modules	230 V~	2		
Control voltage	Number of modules											
230 V~	2											
1	4 062 59	<p>Auxiliary + fault signalling contact or auxiliary contact + auxiliary contact 6 A - 250 V~ (changeover switch) For DX³-ID RCCBs B type Cat.No 4 118 42/43/44/45/46/47/48/49 (p. 57) Allows the choice between the two functions</p>	0.5	1	4 062 92	<p>ON/OFF + automatic resetting function - for 1 module / pole devices (In up to 63 A) Automatically resets the device to which it is associated, thus ensuring continuity of service</p> <table border="1"> <thead> <tr> <th>Control voltage</th> <th>Number of modules</th> </tr> </thead> <tbody> <tr> <td>24-48 V~/=</td> <td>2</td> </tr> <tr> <td>230 V~</td> <td>2</td> </tr> </tbody> </table>	Control voltage	Number of modules	24-48 V~/=	2	230 V~	2
Control voltage	Number of modules											
24-48 V~/=	2											
230 V~	2											
1	4 062 64	<p>Auxiliary + fault signalling contact or auxiliary contact + auxiliary contact 6 A - 250 V~ (changeover switch) For MCB, RCBOs, RCCBs</p>	1	1	4 062 93	<p>24-48 V~/=</p>						
				1	4 062 95	<p>230 V~</p>						